

Installing a double Dreamscreen

Check measurement


Left



Center



and right

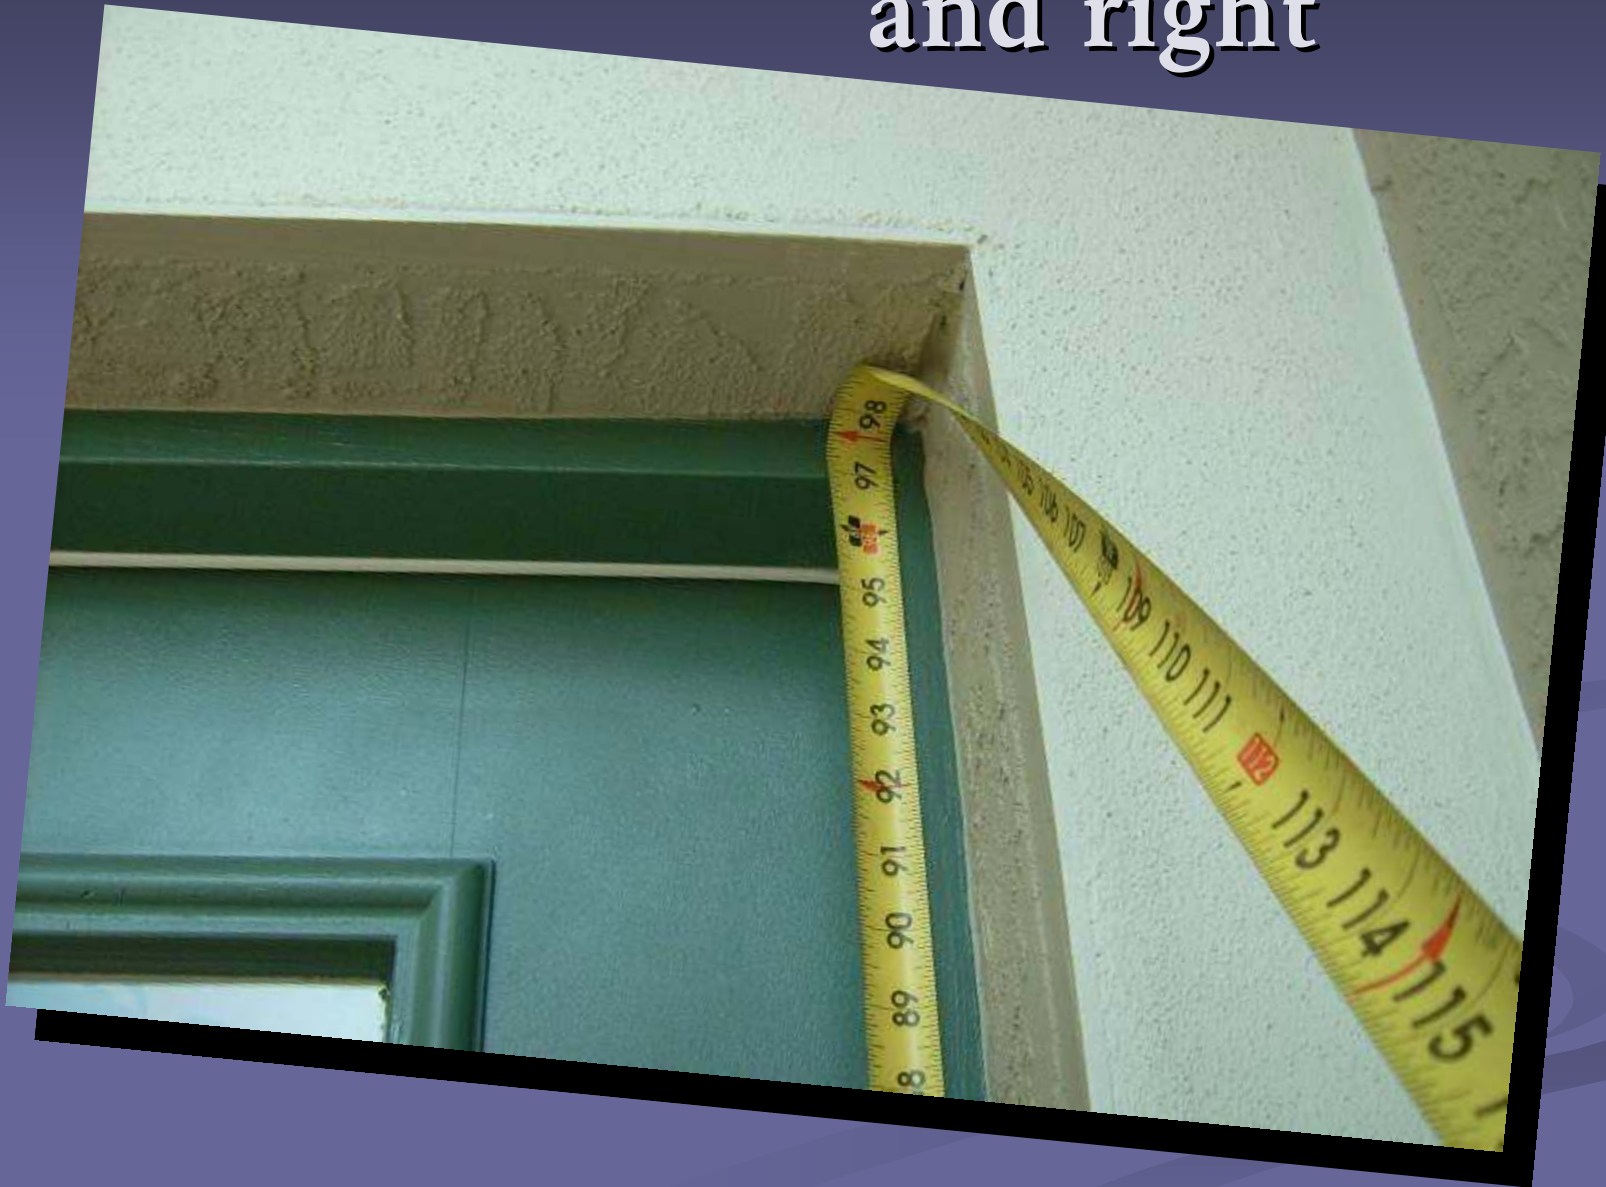

Check your Dreamscreen

- Be sure that the Dreamscreen you ordered is the right size for the opening.
- Let's move on with the installation

Let's open the boxes.

- Inside the right door box, there should be a dreamscreen and the top and bottom track.
- Inside the left door box, there should be a dreamscreen, and a screw pack and a set of specially designed stop pins.

Any other options purchased will also be in one of the boxes.



Right Door, clear wrapping on ends

Screw pack

Tracks, top and bottom, wrapped together

Left Door, Blue wrapping on ends



Stop Pins now included in all double Dreamscreens

Contents of the Double Door Screw Pack.



4 #10 phillips screws

Top track support
And screw
(optional)

This is all you need to install a dreamscreen

Spring tension tool.
(This is not needed for custom sized screens)





Stop Pin Hardware

Tracks

Top

Bottom

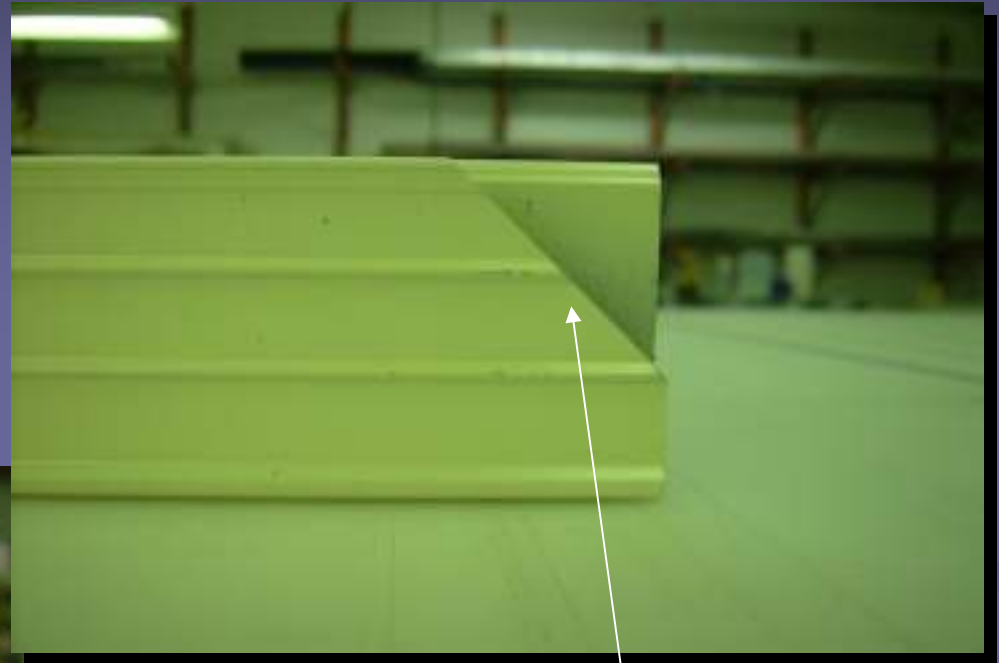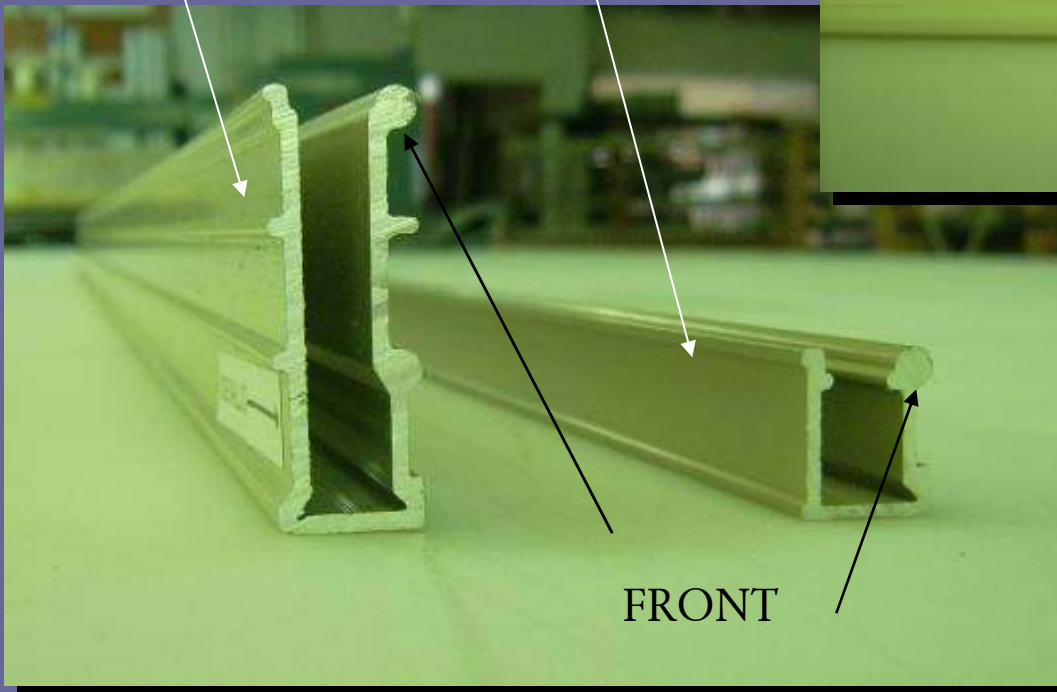


Notice the 45° notch on the back of the top track

Installation



Here, we check the sill
for levelness.

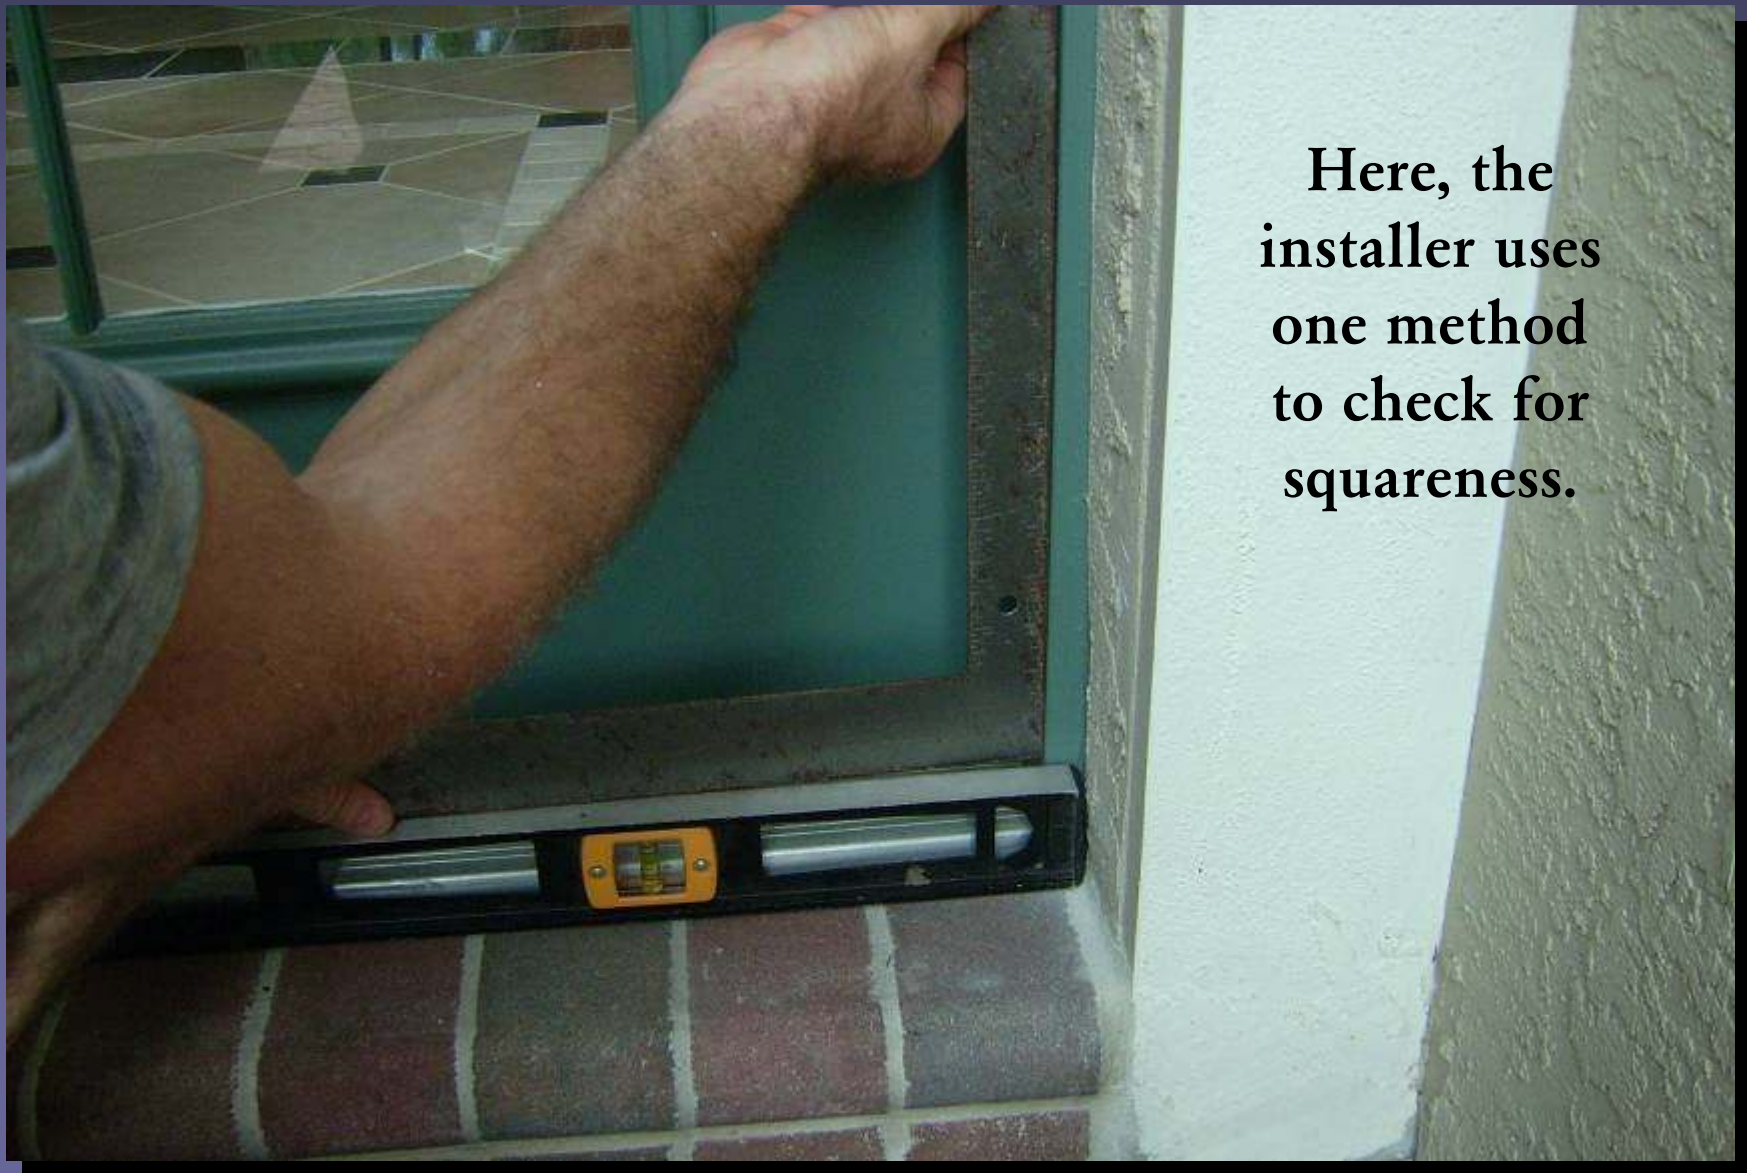

Here, the installer uses one method to check for squareness.

Note

- Dreamscreens do not have to be level or plumb but they do have to be square.




Prep




Here, the installer sets himself up to begin

Set the first door up

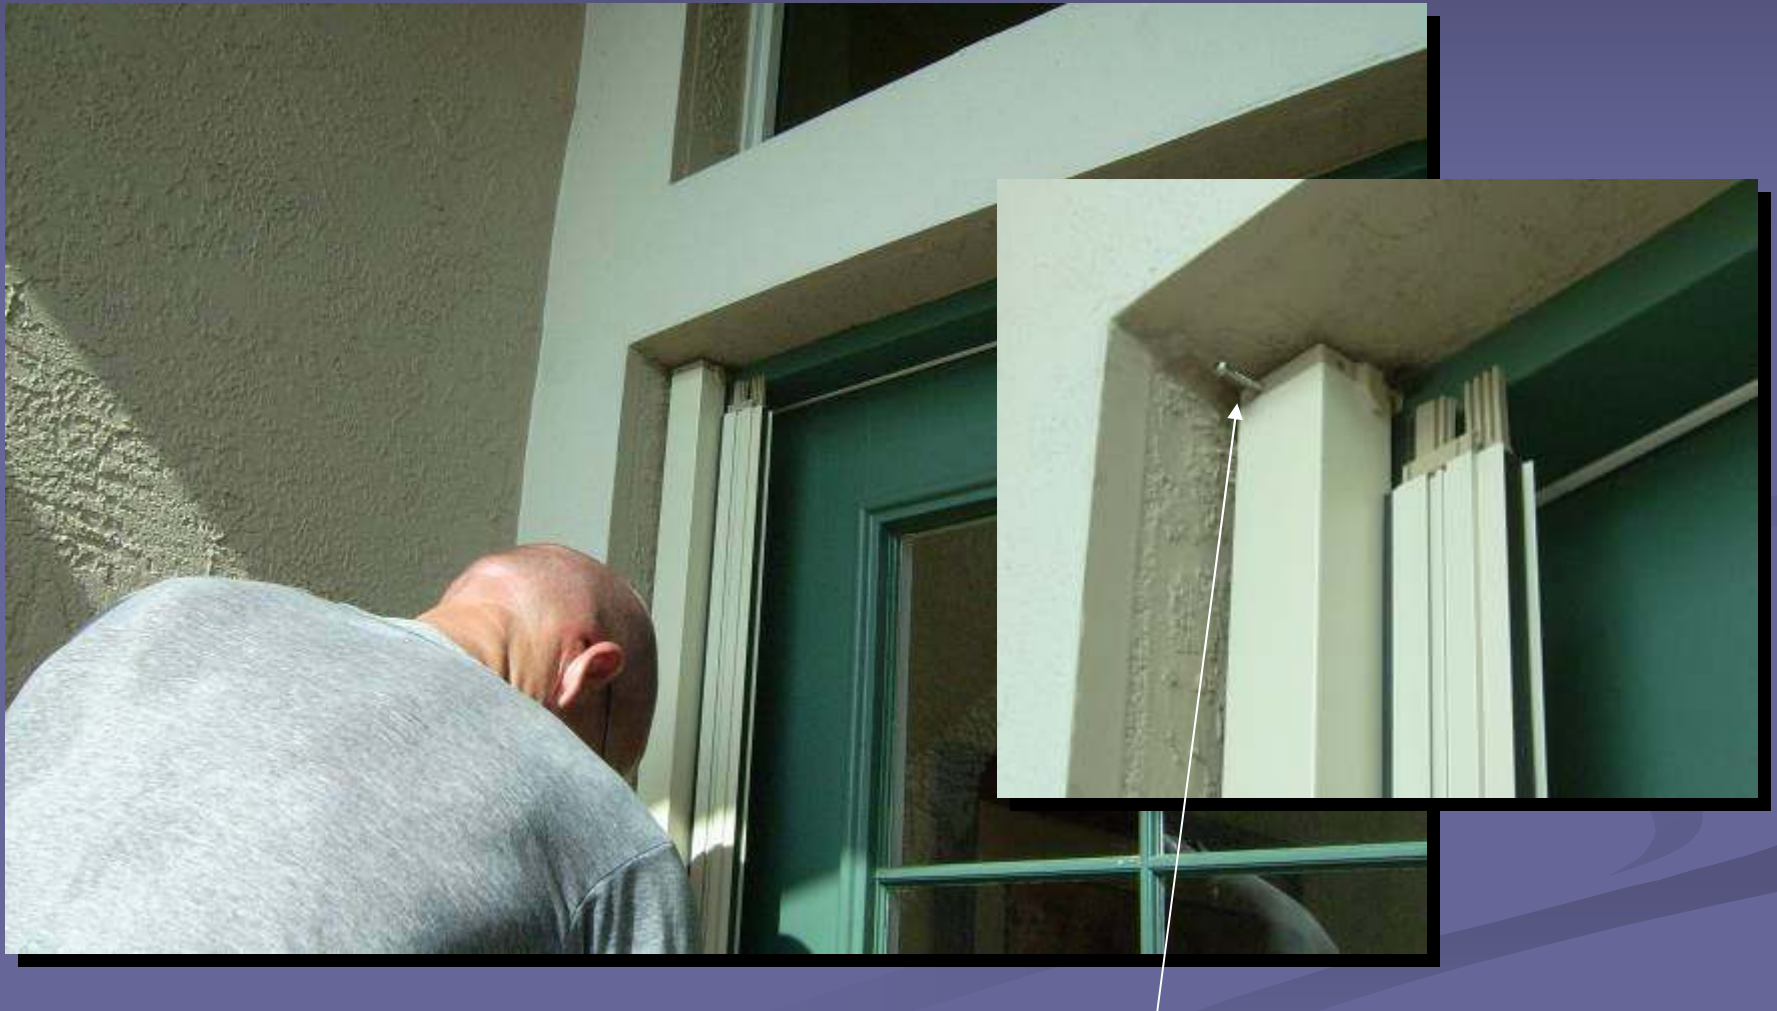

Insert screw and half tighten - just enough to hold

Repeat on other side

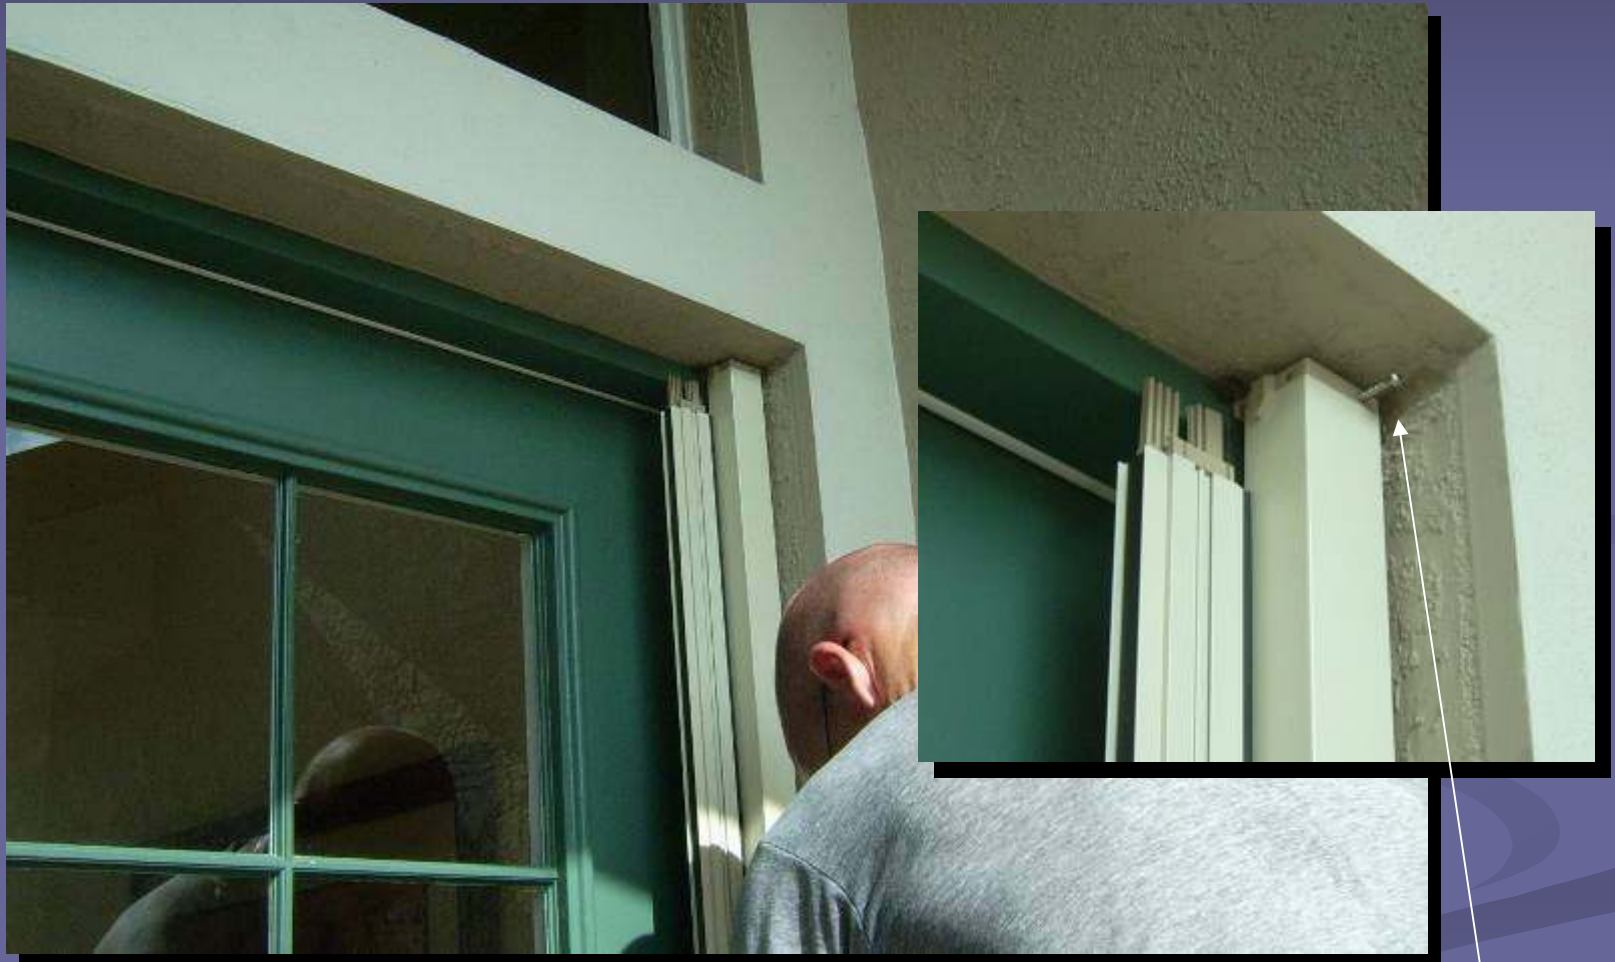

Remember to not tighten the screw, just enough to hold

Measure for the tracks

Measure exact from housing to housing



From here



To here

Repeat at the bottom



Compare the two measurements.

Very Important!

- The top and the bottom track must be the exact same length. If they are not, the dreamscreens will not operate properly...
- If these measurements are not the same, use the smaller of the two measurements as your track size.

Mark out the tracks.




Make the cut



Remember to cut both tracks the exact same size

After cutting tracks.....

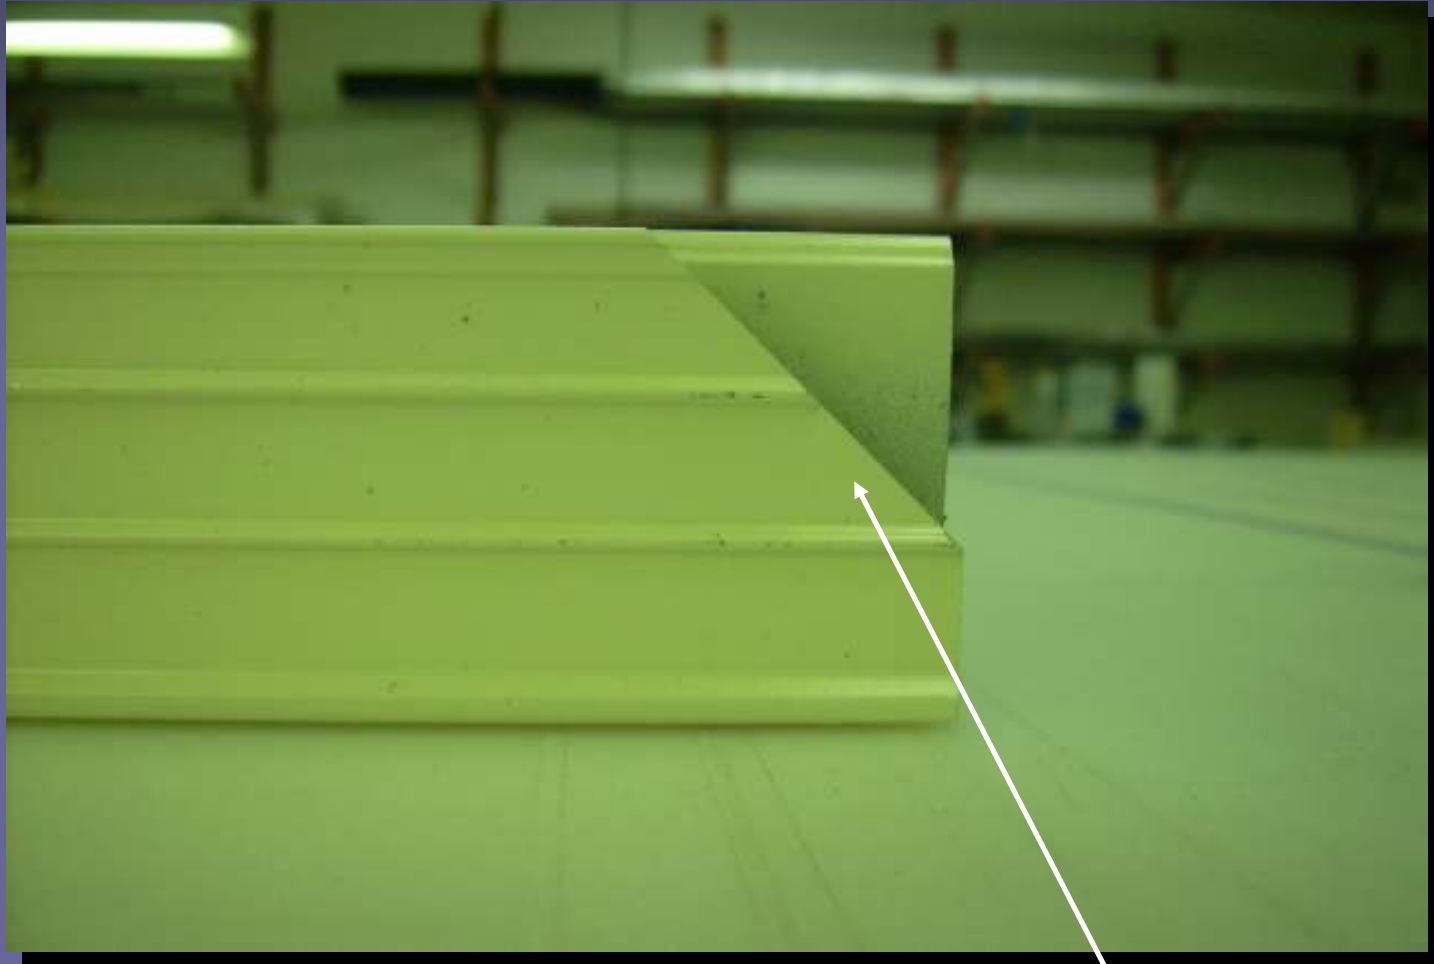

Re-cut the 45° angle on the freshly cut end


Only on the back – not the front

Install the track



Slide track through
plastic guide and onto
the brass clip

Track fits onto clip

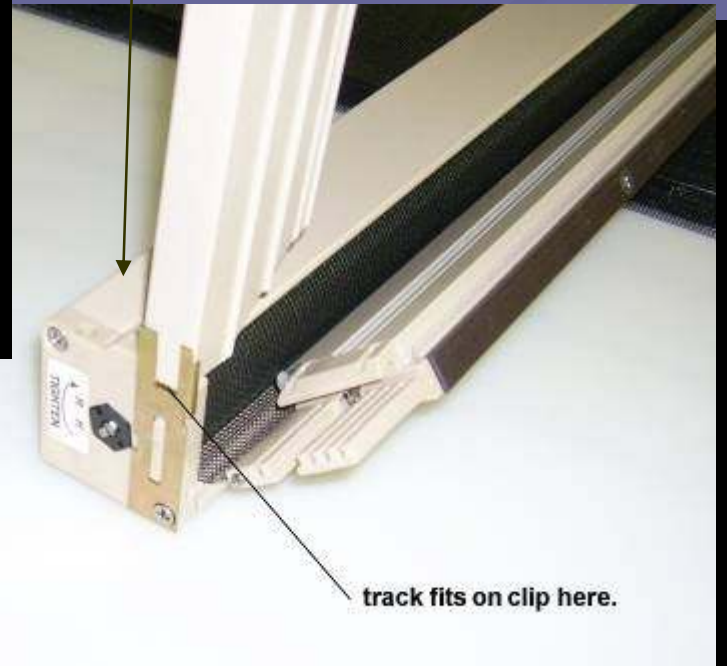

track fits on clip here.



Track snug against housing



Repeat on other side



Remove the screw to pull the housing out enough to fit track

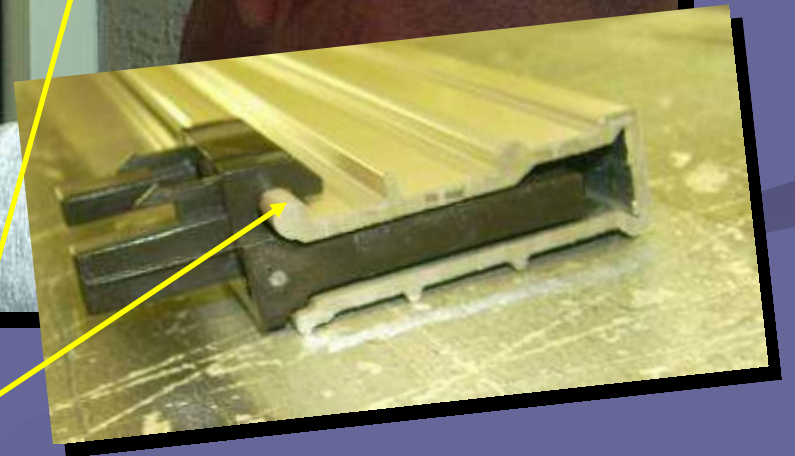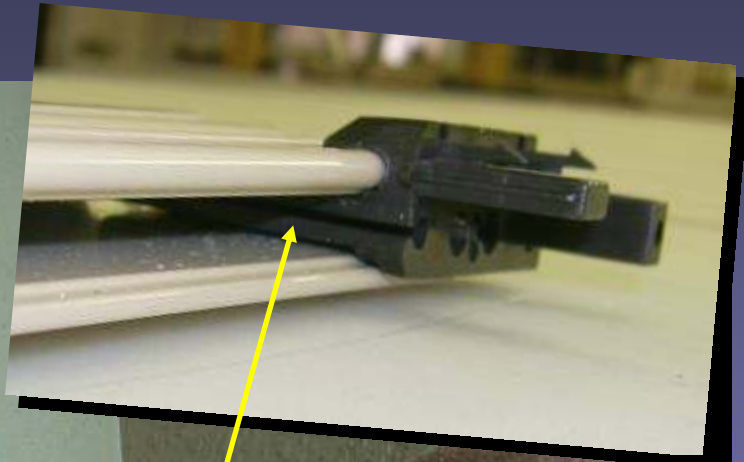

Track fits through guide

Through guide and onto clip



Fit bottom track same as the top



Repeat for other side



Through guide and onto clip



Rail snug against housing




It should look like this.



Make sure it is square...

Use a carpenter's square and make sure the unit is square. If it isn't, make adjustments until it is.

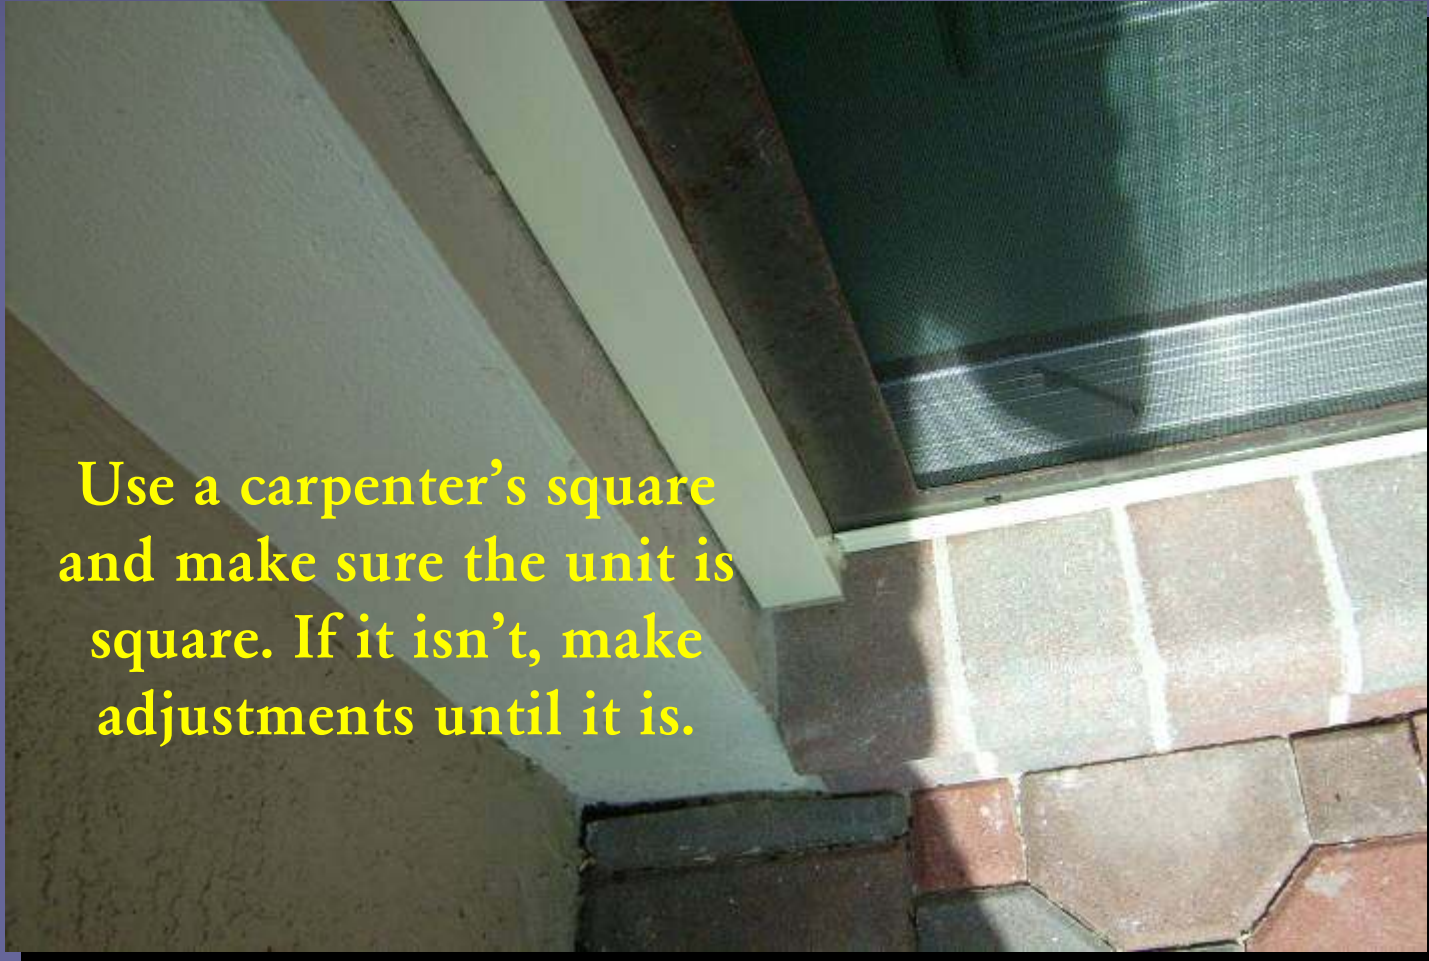

Now you can tighten the screws



Lubricate the tracks



Pure silicone only where guides meet the tracks

**Never
use
WD-40**

On your Dreamscreen

Use pure clear Silicone only

Cycle the door



That's it

- You have installed a double Dreamscreen.